



SPEED DOWEL INSTRUCTIONS


For optimum reuse of your formwork when using the **SPEED DOWEL system**
(For round or square speed dowel base plates)

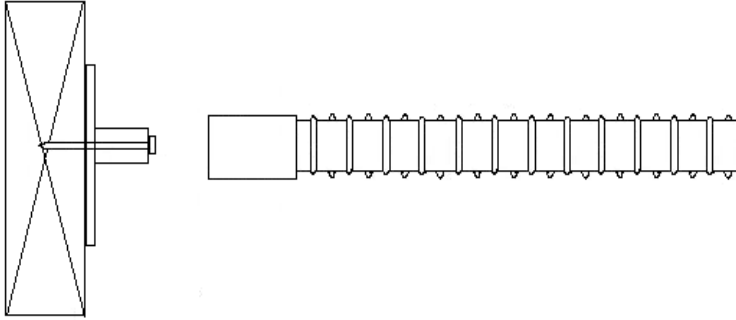

For round base plates, only one central screw is required (as pictured). (NOTE: Flat part of base is to be lined up with string line)

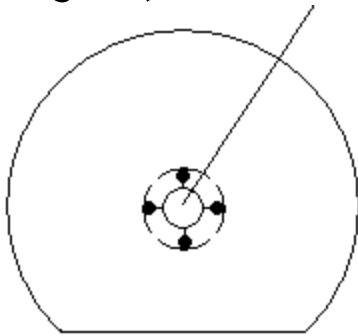

For square base plates, use three screws as pictured.

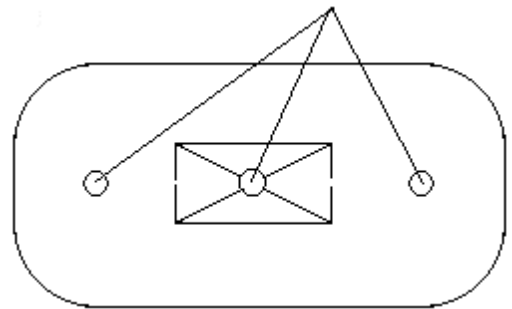

Remove all slurry from the back of the formwork that the base is attached to for easy form removal.

IMPORTANT INFORMATION

Inside the speed dowel sleeve is a nipple 20mm long. When inserting dowel into sleeve do not force any further than the nipple.

When dowel bars have been cropped and not cut, only one end of the dowel will slide into the sleeve. Try the other end or grind one end of the dowel.

DO NOT HAMMER THE DOWEL INTO THE SLEEVE!

FOR ONSITE ASSISTANCE CALL US ON 0800 422

CANZAC®

PO Box 3181, Central Mail Centre 8140, 3 Parkhouse Road, Wigram, Christchurch, 8042
Phone: 03 343-4254 • Fax: 03 343-4237 • Email: info@canzac.com • www.canzac.com

Under Slab – In Slab – On Slab®